


# How to Order an Assembly

## Assembly Part Number

PSD	200	RE	200	TC	200	TC	P	15/0
Hose	ID Size	Fitting Style	Size/Style First End	Size/Style Second End	Hose Sleeve Material	Assembly Length		
<b>Hose</b>	<b>ID Size</b>	<b>Fitting Style</b>	<b>End Style</b>		<b>Hose Sleeve</b>	<b>Assembly Length</b>		
PSD	025 = 1/4"	RE = ReSeal®	TC = Sanitary Clamp		S = Stainless	Feet/Inches		
GCR	037 = 3/8"	PC = PermaSeal®	BS = Bevel Seat and Hex Nut		P = Polymer			
SSW	050 = 1/2"	Radial Crimp	BM = Male Threaded Bevel					
CTL			EF = I-Line Female					
G-FDA			EM = I-Line Male					
FGR	062 = 5/8"		JM = John Perry Male					
CSC	075 = 3/4"		JF = John Perry Female					
CSW	100 = 1"		MPT = Male Pipe Thread					
CBT	150 = 1-1/2"		FPT = Female Pipe Thread					
CCT	200 = 2"		AF = AMSI Stub End & Plate Flange					
CSS	250 = 2-1/2"		QM = Q-Line					
SPD	300 = 3"		TE = Tube End Stem (Butt Weld)					
FDP	400 = 4"		CM = Cam & Groove Male					
FPW	600 = 6"		CF = Cam & Groove Female					
MHH			XTE = Extended Shank					
SBT			PE = Perlick End					
SBTC								
BRH								
BRH-AB								

Overall length tolerances for assemblies are:

- 1/4" on assemblies to 24"
- 1/2" on assemblies 25" to 60"
- 1" on assemblies over 60"

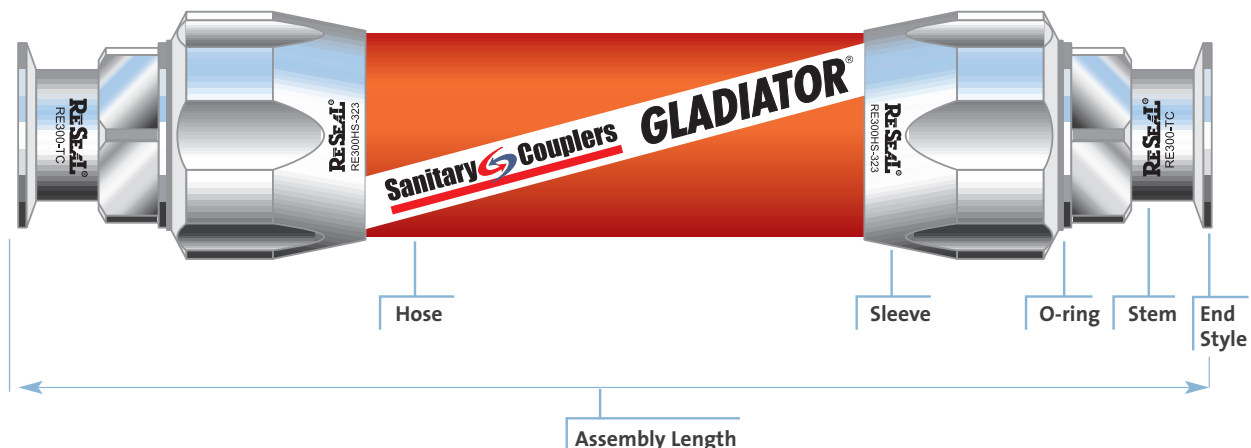

**NOTE ON RETURN POLICY:** Any unused and unassembled product may be returned only at the approval of the manufacturer. There will be a 25% restocking charge for any of these returned products provided the products are in good unused condition.